




SLEEPSENSE® | SLPSENSE


QUICK START GUIDE

DOWNLOAD THE APP
This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

SleepSense is compatible with ES700, SS800

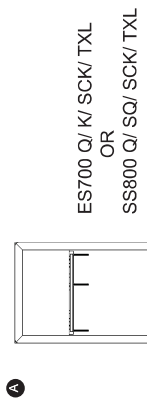






INCLUDED PARTS

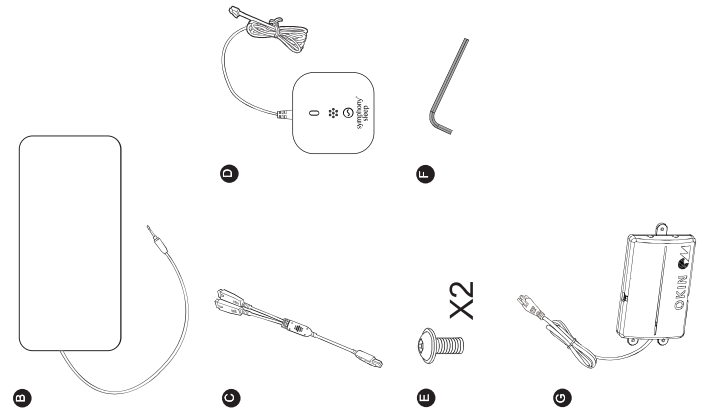

WARNING
DO NOT TILT or LEAN base on legs when turning base over.

1 Installation for ES700 TXL/ SCK

To properly install unplug the base and turn base over (requires 2 person lift).

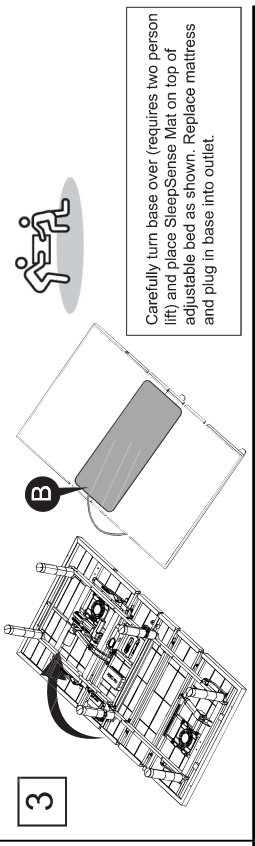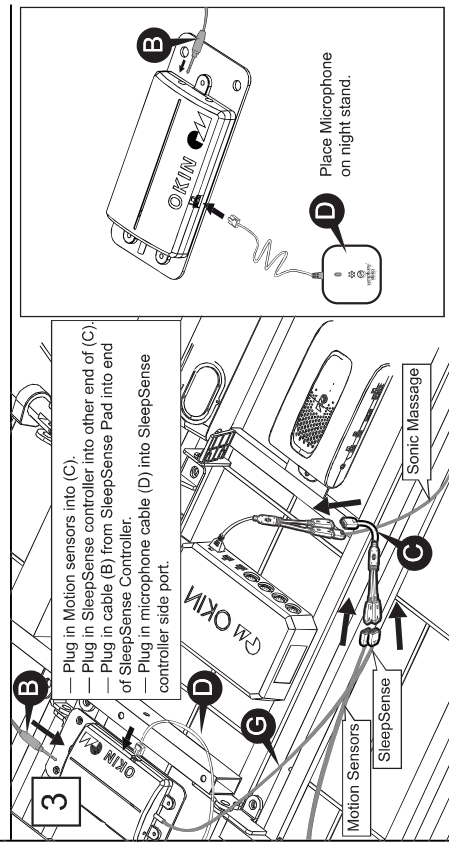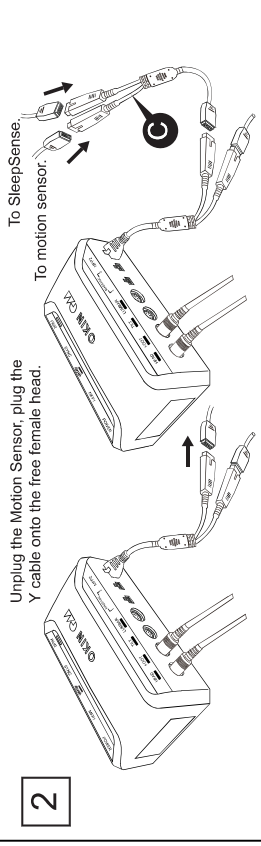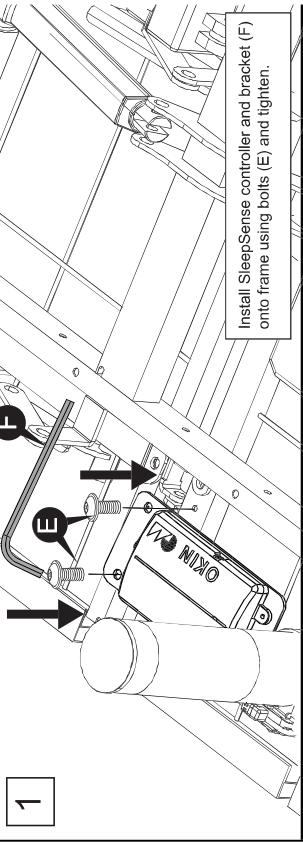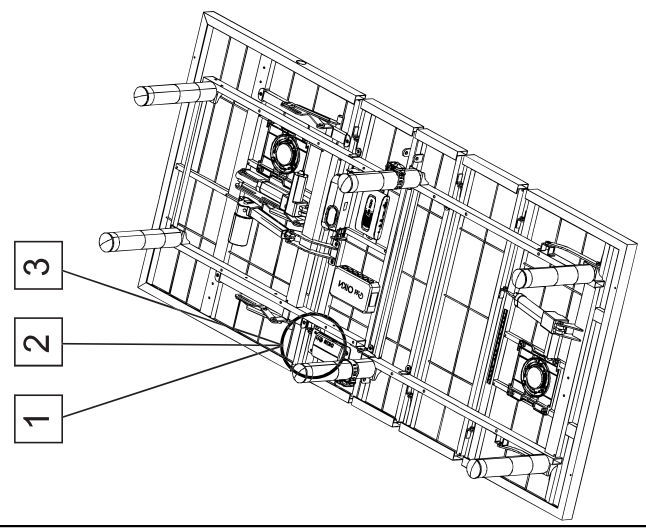

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are available at symphonysleep.com








SLEEPSENSE® | SLPSENSE

QUICK START GUIDE



This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

- 2** Installation for ES700 Q/ K
- To properly install unplug the base and turn base over (requires 2 person lift).

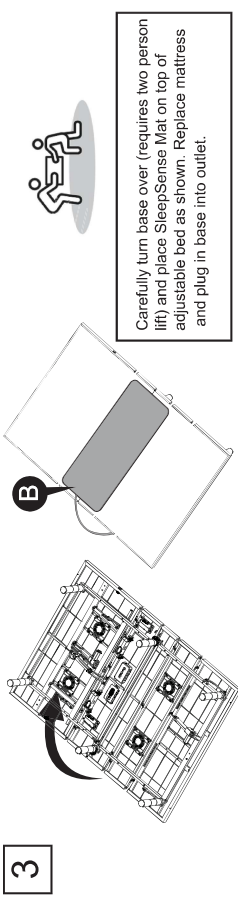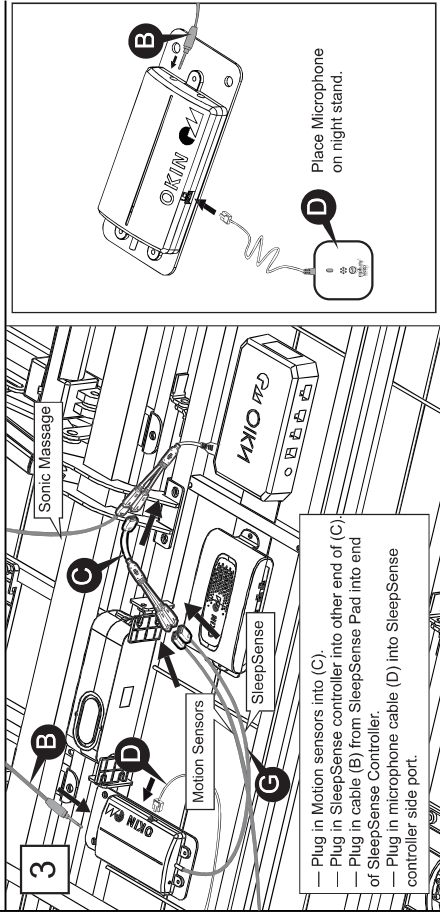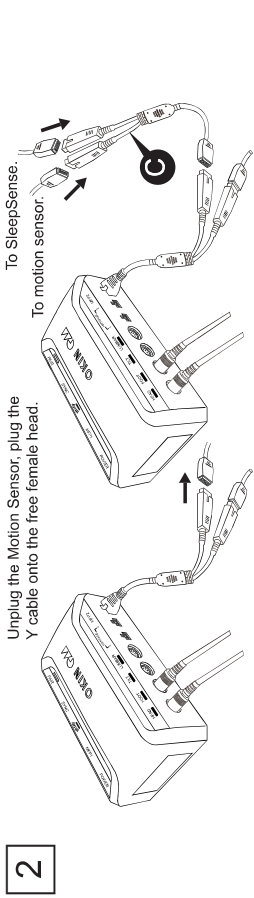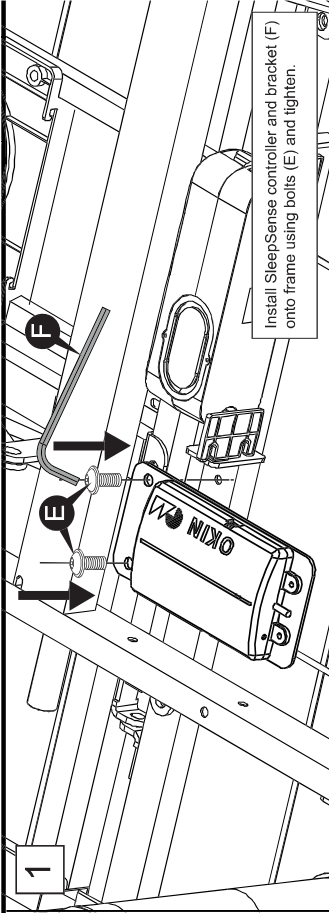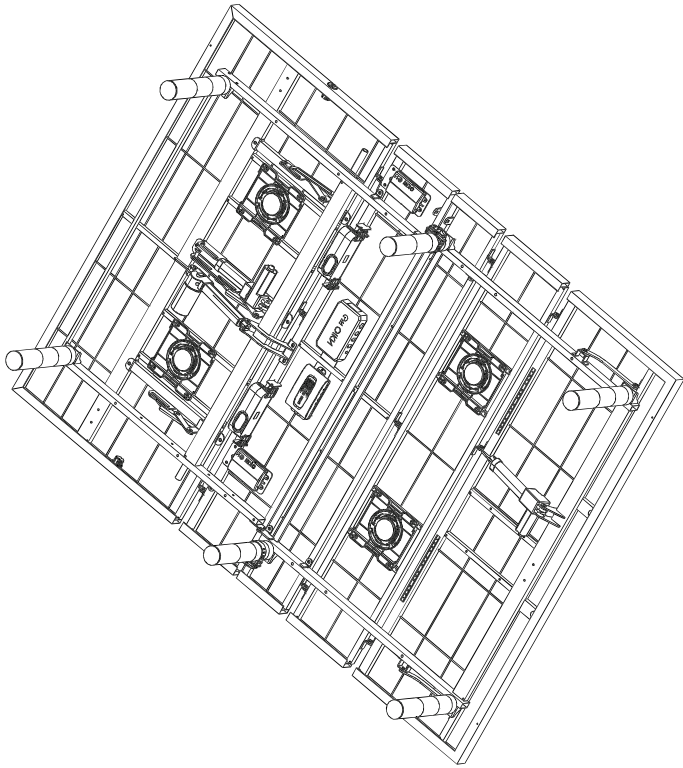

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.





SLEEPSENSE® | SLPSENSE

QUICK START GUIDE





DOWNLOAD THE APP
This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.


3 Installation for SS800 TXL/ SCK/ SQ
To properly install unplug the base and turn base over (requires 2 person lift).

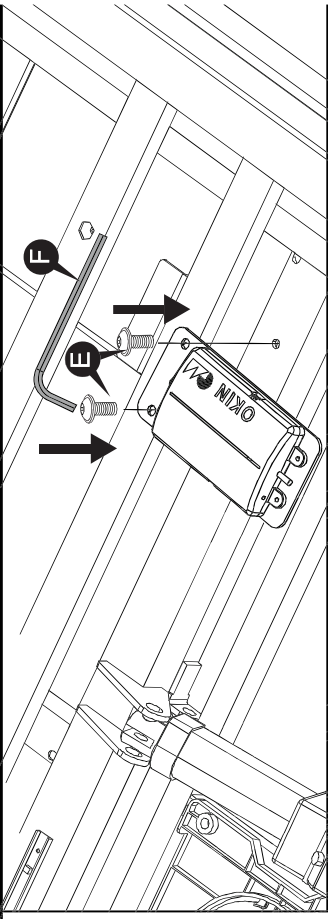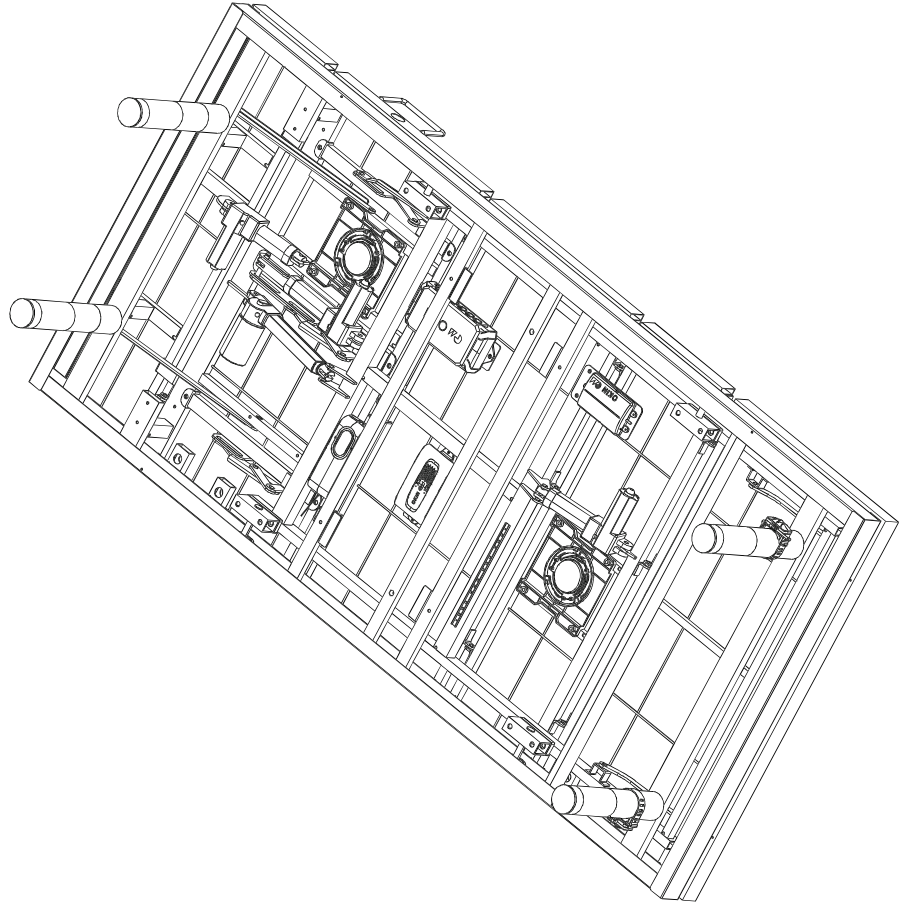

2

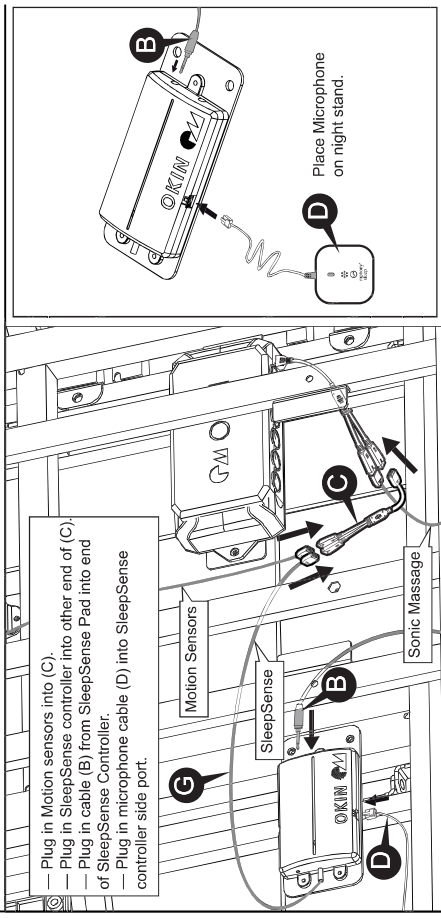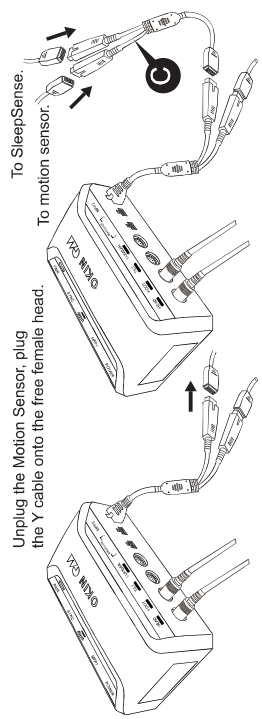

3

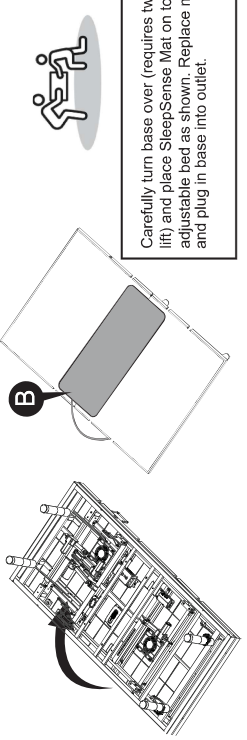

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are available at symphonysleep.com





SLEEPSENSE® | SLPSENSE

QUICK START GUIDE



This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

- 4** Installation for SS800 Q
To properly install unplug the base and turn base over (requires 2 person lift)

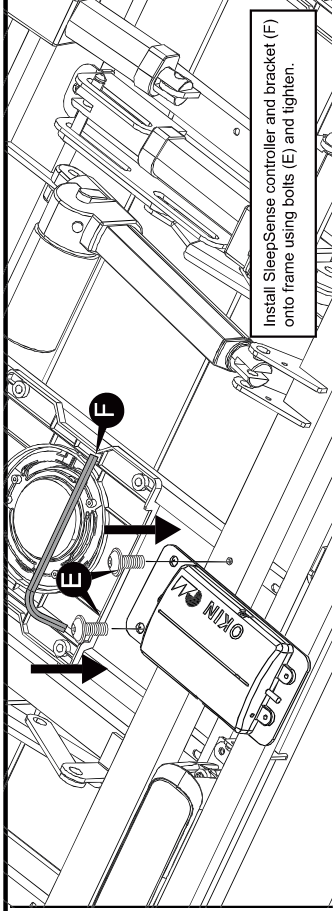
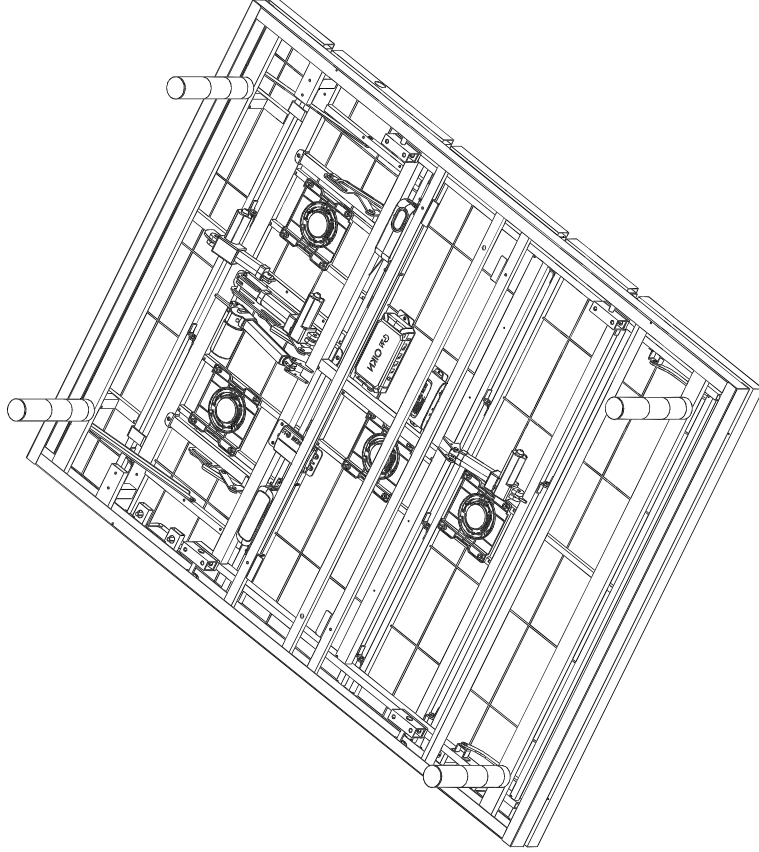


Install SleepSense controller and bracket (F) onto frame using bolts (E) and tighten.

2


Unplug the Motion Sensor, plug the Y cable onto the free female head.

To SleepSense.
To motion sensor.

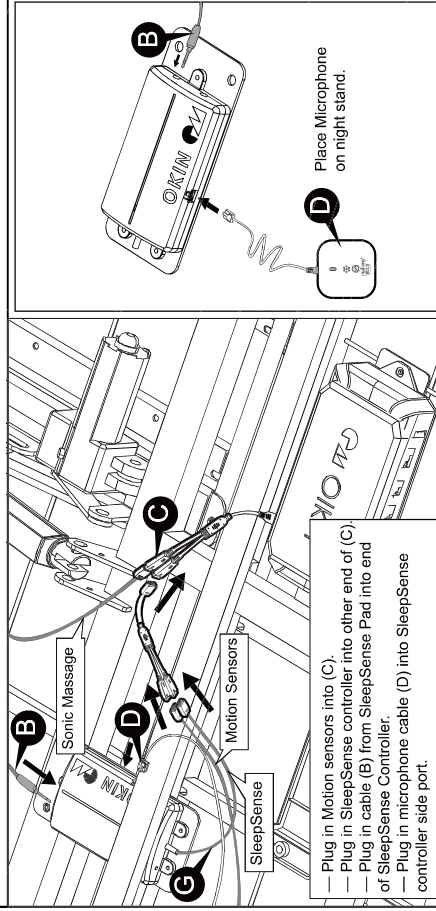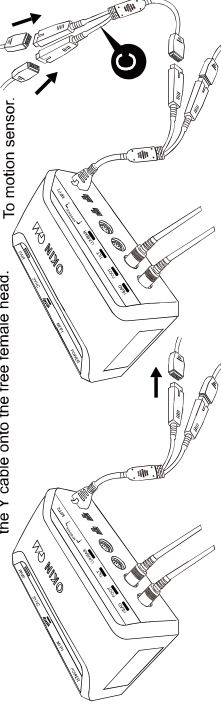

Plug in Motion sensors into (C).
Plug in SleepSense controller into other end of (C).
Plug in cable (B) from SleepSense Pad into end of SleepSense Controller.
Plug in microphone cable (D) into SleepSense controller side port.

3

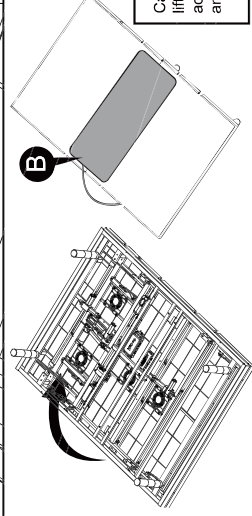

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com




SLEEPSENSE® | SLPSENSE

QUICK START GUIDE




This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

SleepSense is compatible with ES700, SS800

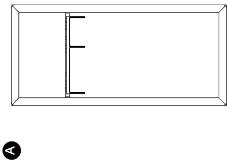

ES700 Q/ K/ SCK/ TXL
OR
SS800 Q/ K/ SCK/ TXL


INCLUDED PARTS

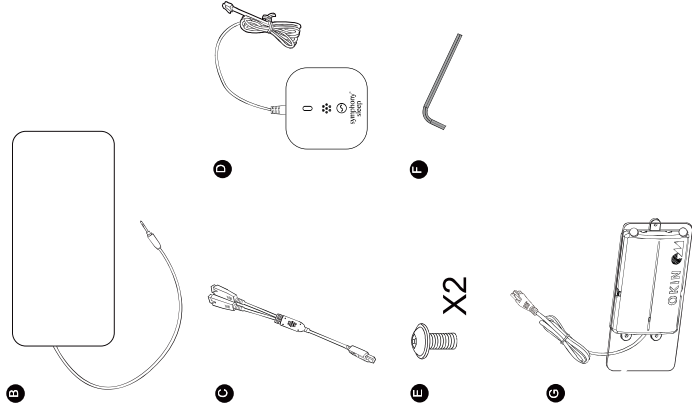

WARNING
DO NOT TILT or LEAN base on legs when turning base over.

1 Installation for ES700 TXL/ SCK


To properly install unplug the base and turn base over (requires 2 person lift).

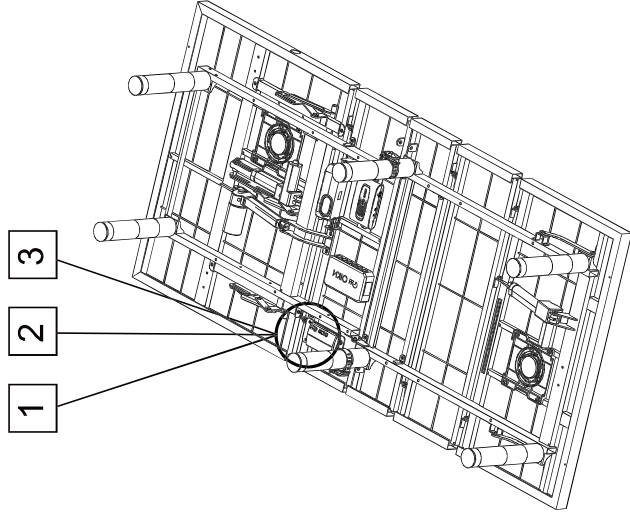

1

Install SleepSense controller and bracket (G) onto frame using bolts (E) and tighten.


2

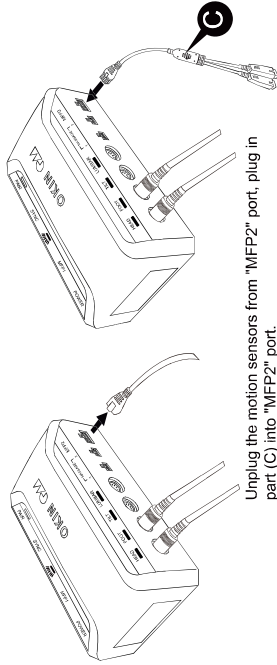

Unplug the motion sensors from "MFP2" port, plug in part (C) into "MFP2" port.


3

- Plug in Motion sensors into (C)
- Plug in cable (B) from SleepSense Pad into end of SleepSense Controller
- Plug in microphone cable (D) into SleepSense controller side port

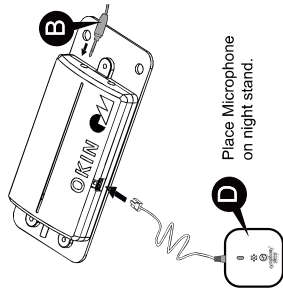

Place Microphone on night stand.

3

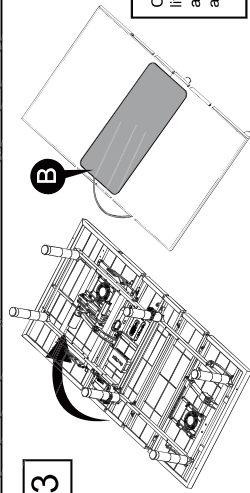

Carefully turn base over (requires two persons lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are available at symphonysleep.com





SLEEPSENSE® | SLPSENSE

QUICK START GUIDE




This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.


2 Installation for ES700 Q/ K
To properly install unplug the base and turn base over (requires 2 person to lift).

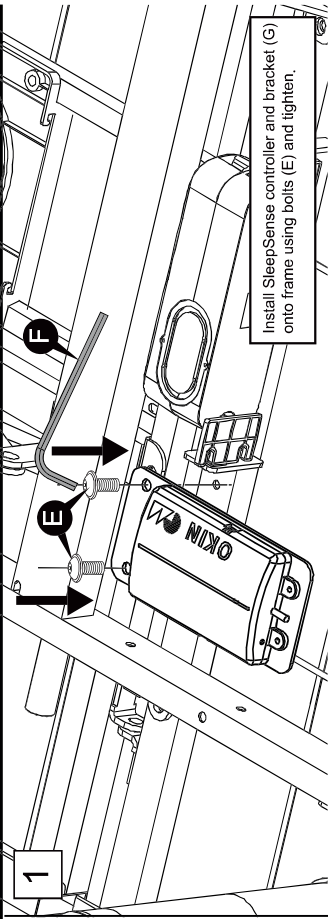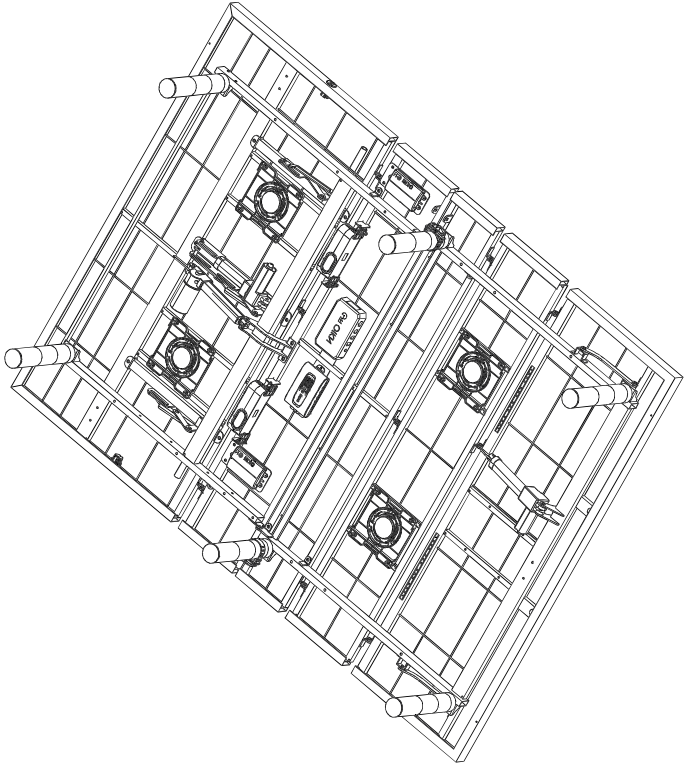


Install SleepSense controller and bracket (G) onto frame using bolts (E) and tighten, (F).

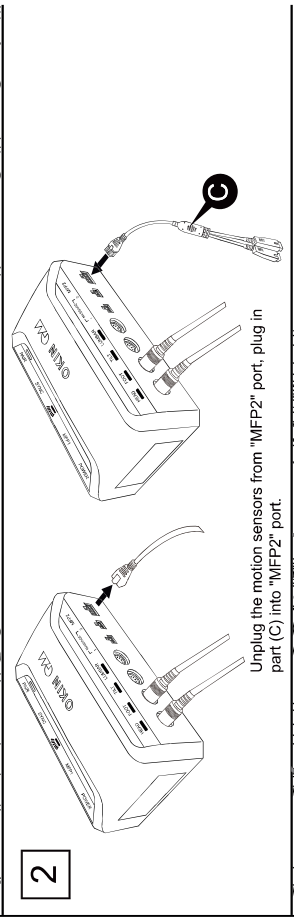

Unplug the motion sensors from "MFP2" port, plug in part (C) into "MFP2" port.

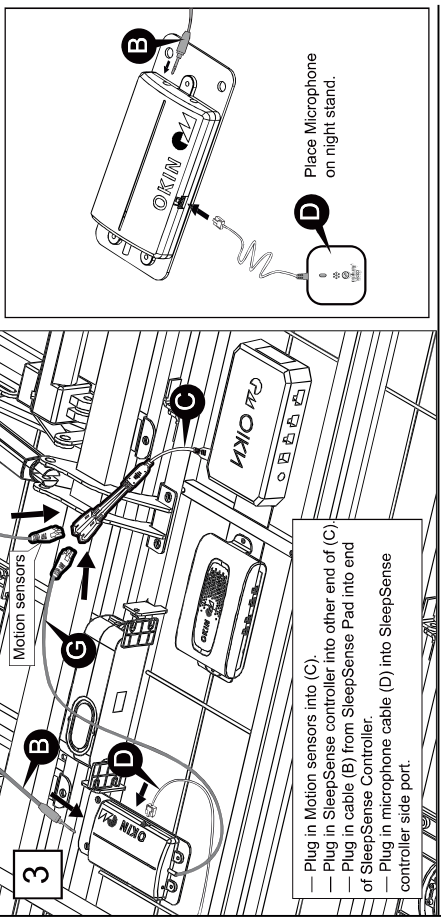

- Plug in Motion sensors into (C).
- Plug in SleepSense controller into other end of (C).
- Plug in cable (B) from SleepSense Pad into end of SleepSense Controller.
- Plug in microphone cable (D) into SleepSense controller side port.

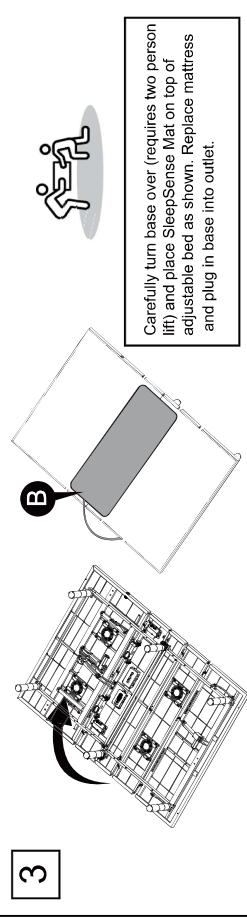

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com





SLEEPSENSE® | SLPSENSE

QUICK START GUIDE




This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

- 3** Installation for SS800 TXL/ SCK/ SQ
To properly install unplug the base and turn base over (requires 2 person lift).

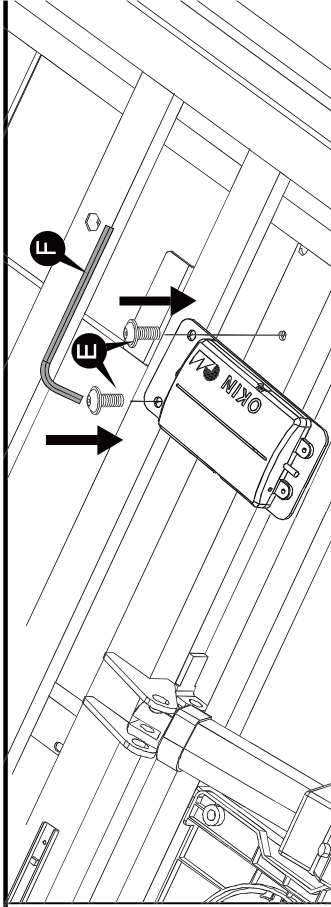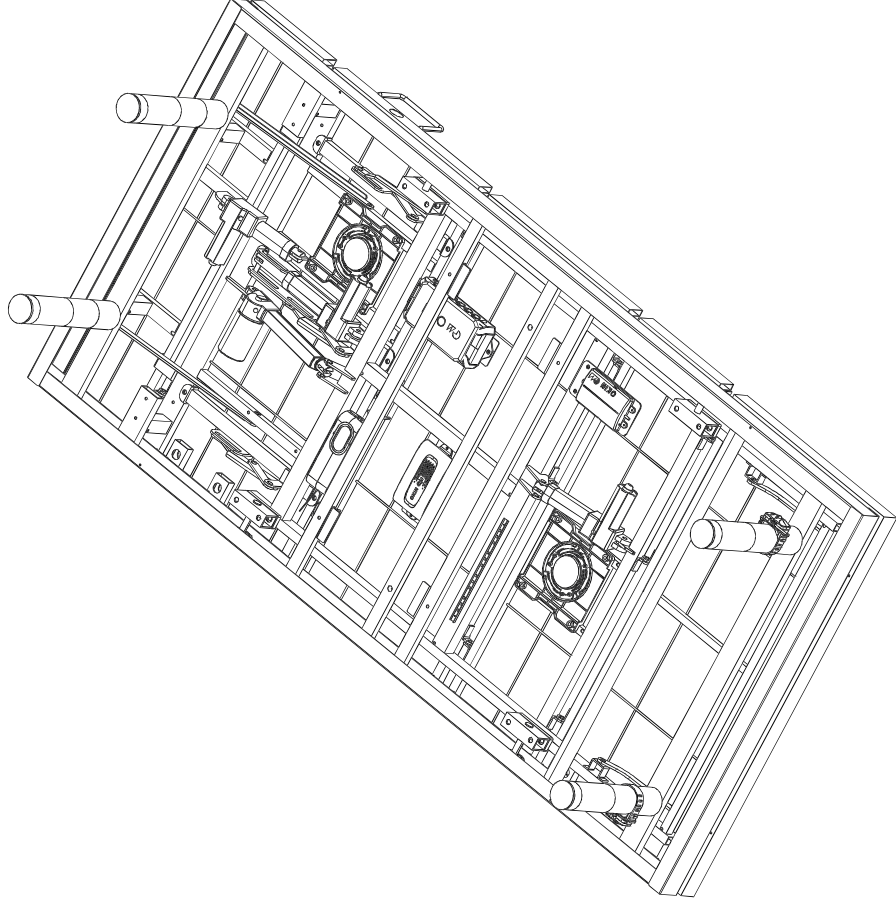


2

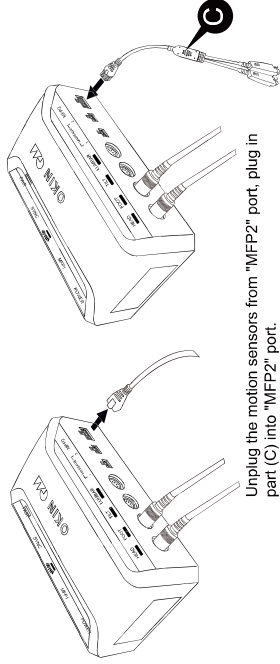


Unplug the motion sensors from "MFP2" port, plug in part (C) into "MFP2" port.

- Plug in Motion sensors into (C).
- Plug in SleepSense controller into other end of (C).
- Plug in cable (B) from SleepSense Pad into end of SleepSense Controller.
- Plug in microphone cable (D) into SleepSense controller side port.

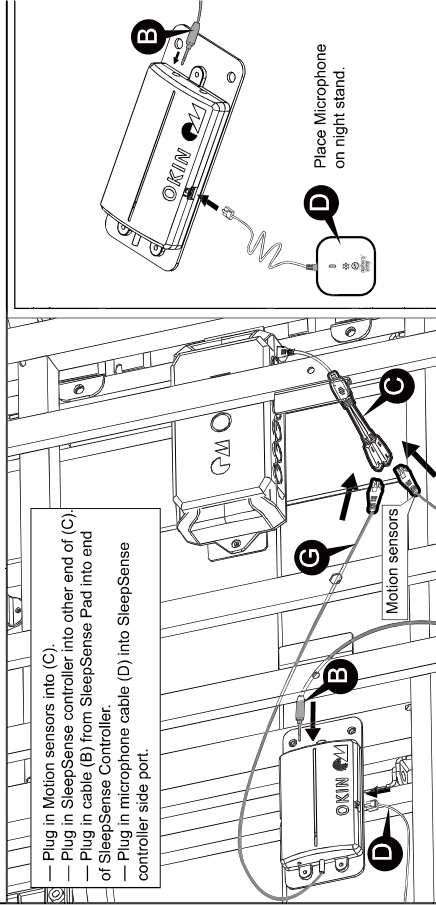

3

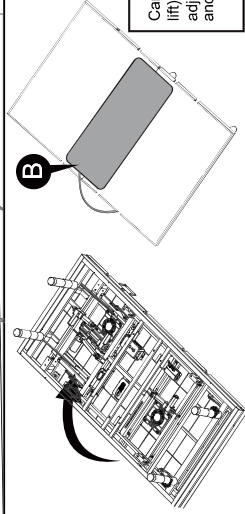

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com





SLEEPSENSE® | SLPSENSE

QUICK START GUIDE




This adjustable base* is compatible with our Symphony Sleep for Bluetooth remote app. Go to www.symphonysleep.com/app to learn more.

- 4** Installation for SS800 Q
- To properly install unplug the base and turn base over (requires 2 person lift).

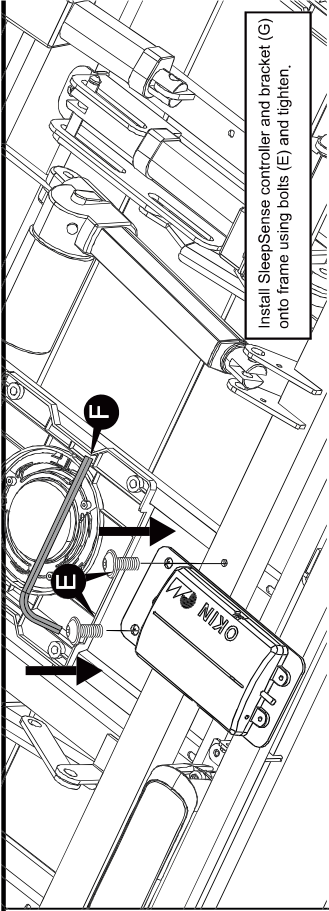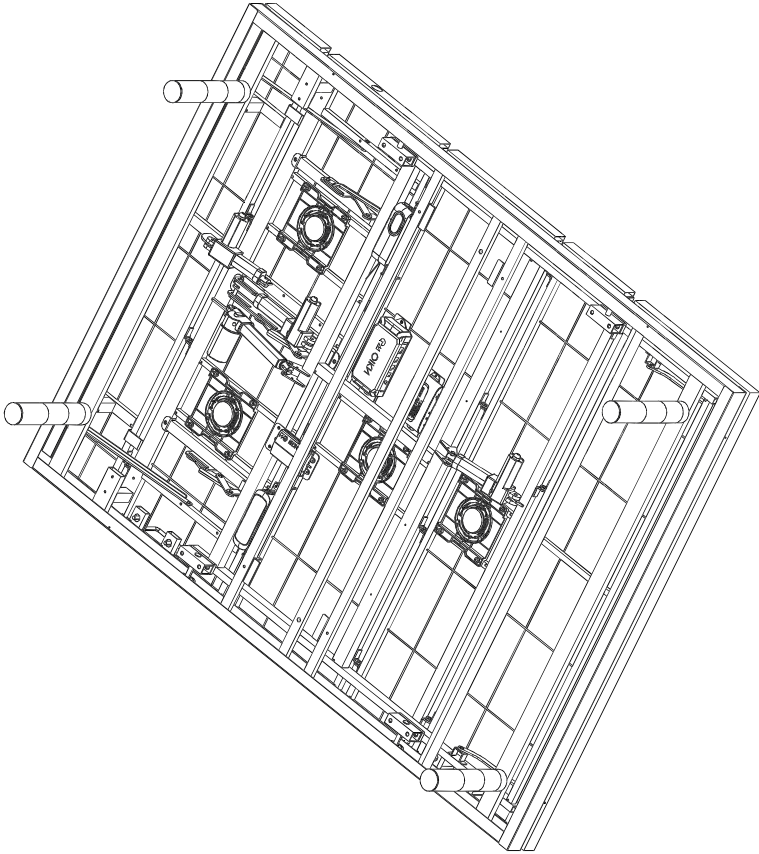


Install SleepSense controller and bracket (G) onto frame using bolts (E) and tighten.

2

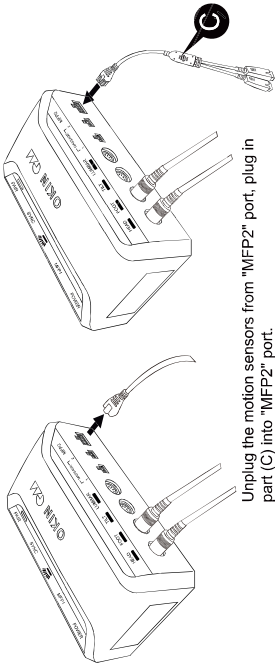


Unplug the motion sensors from "MFP2" port, plug in part (C) into "MFP2" port.

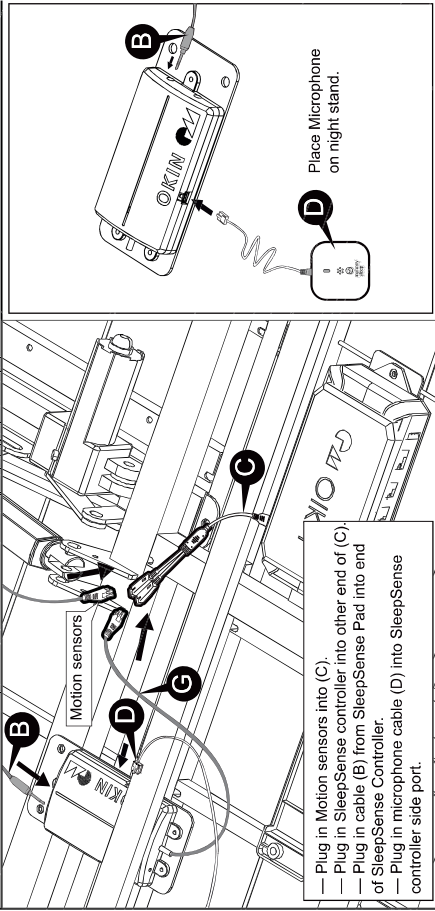

Plug in Motion sensors into (C).
Plug in SleepSense controller into other end of (C).
Plug in cable (B) from SleepSense Pad into end of SleepSense Controller.
Plug in microphone cable (D) into SleepSense controller side port.

3

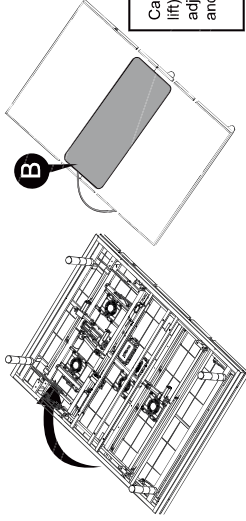

Carefully turn base over (requires two person lift) and place SleepSense Mat on top of adjustable bed as shown. Replace mattress and plug in base into outlet.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com




symphony
sleep

INCLUDED



A



B



C



D





WARNING


DO NOT TILT or LEAN
base on legs when turning
base over

USB UPGRADE KIT | 9.04.615300


QUICK START GUIDE

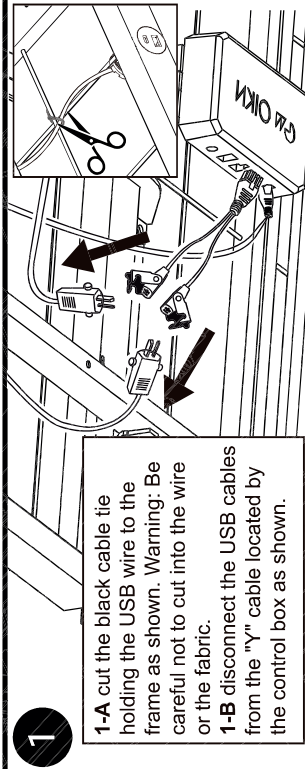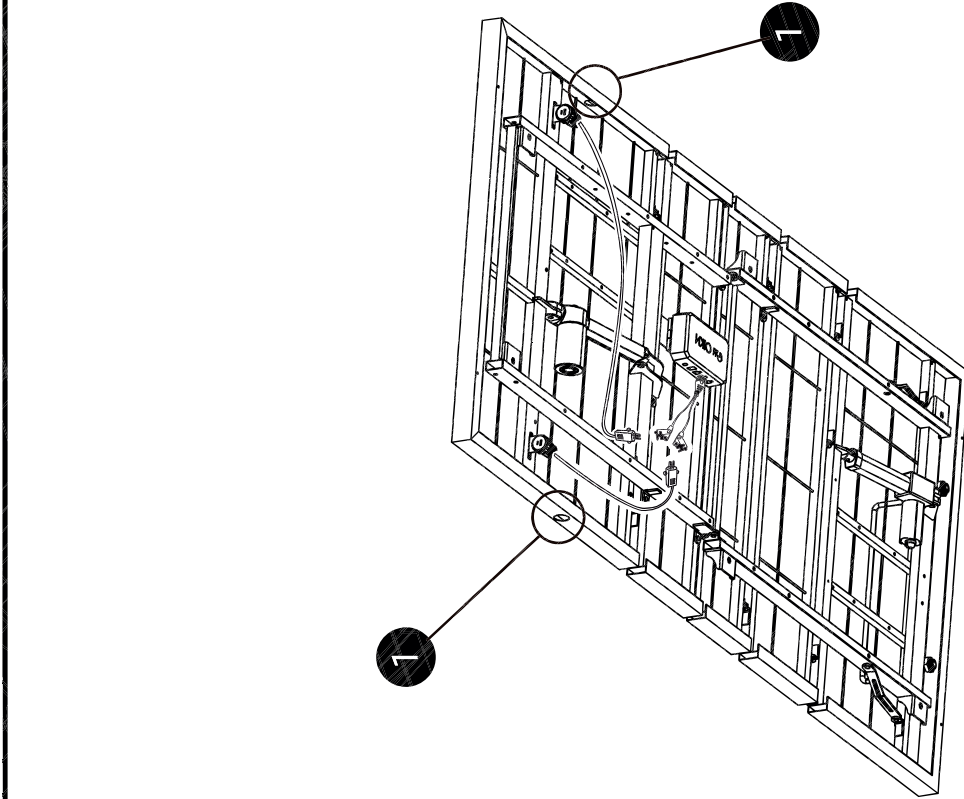


1-A cut the black cable tie holding the USB wire to the frame as shown. Warning: Be careful not to cut into the wire or the fabric.
1-B disconnect the USB cables from the "Y" cable located by the control box as shown.

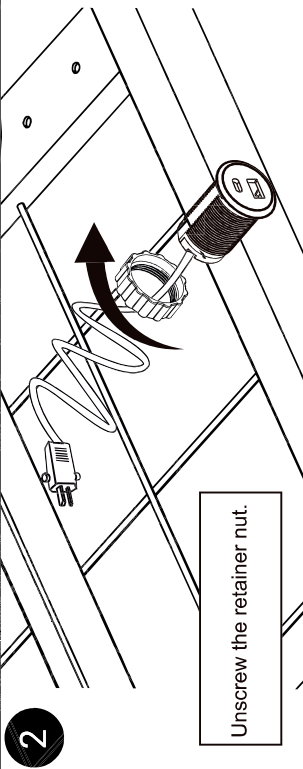

Unscrew the retainer nut.

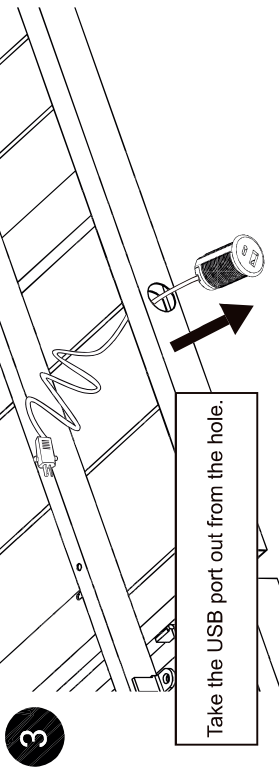

Take the USB port out from the hole.

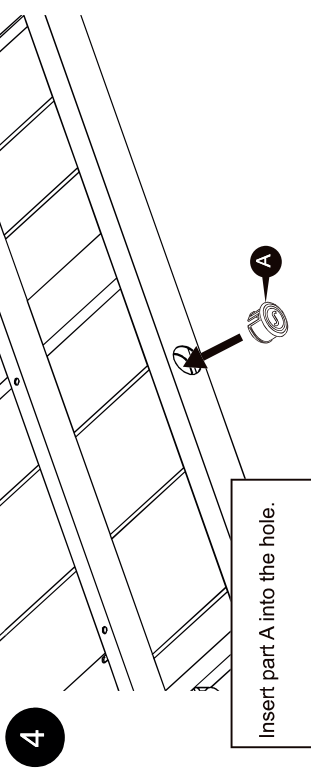

Insert part A into the hole.

Warranty Service
888-821-1555






Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com



USB UPGRADE KIT | 9.04.615300

QUICK START GUIDE

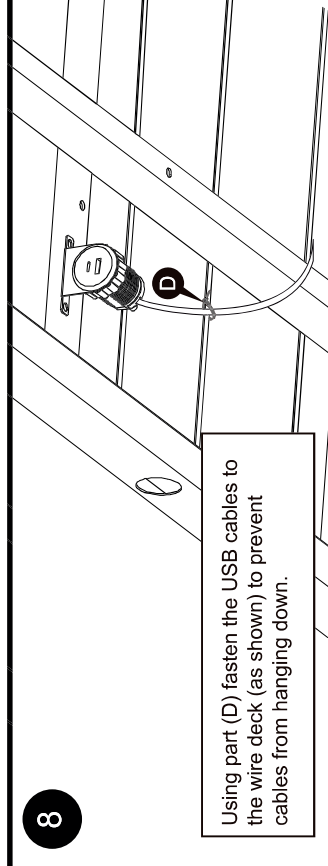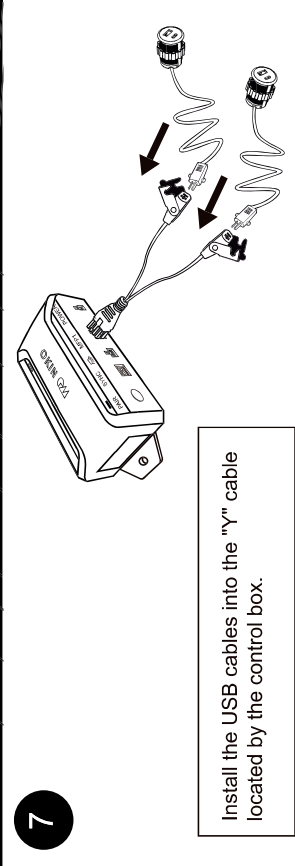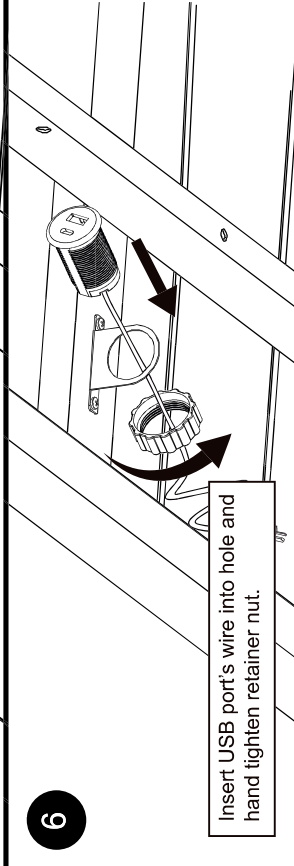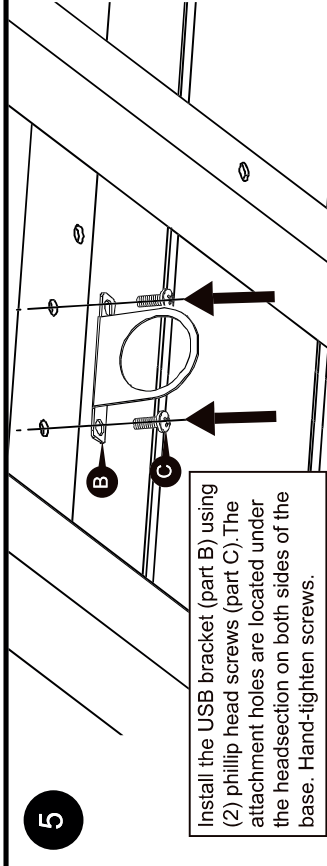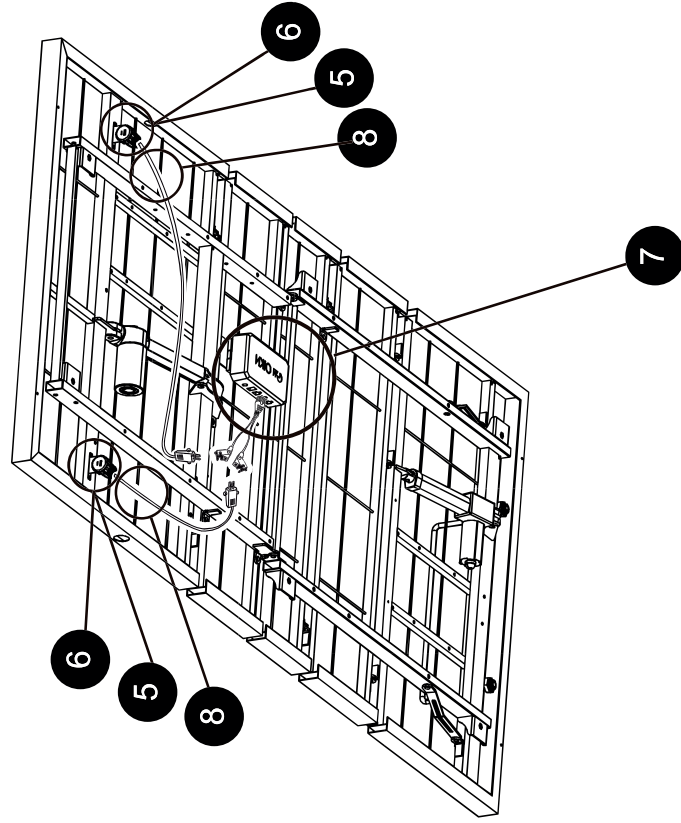



USB UPGRADE KIT | QUICK START GUIDE

SAFETY INFORMATION

ATTENTION!

IMPORTANT SAFETY INSTRUCTIONS. SAVE THIS MANUAL! PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. PROPER OPERATION OF YOUR ADJUSTABLE BED IS NECESSARY TO ENSURE THE LONG LIFE AND DURABILITY YOU EXPECT FROM A HIGH QUALITY PRODUCT. THE MANUFACTURER HAS TESTED AND INSPECTED THIS PRODUCT PRIOR TO SHIPMENT.

ELECTRICAL SAFETY

Always unplug this adjustable bed frame from the electrical outlet before any cleaning or maintenance of the bed frame. To safely disconnect, remove the plug from the outlet. Keep cord away from heated surfaces. Use only indoors. **WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO MOISTURE.** Discontinue use of this adjustable bed base and contact the manufacturer for repair if: (1) it has a damaged cord or plug, (2) it is not working properly, (3) it has been dropped or damaged. **FOR OPTIMAL SAFETY, YOUR ADJUSTABLE BED SHOULD BE PLUGGED INTO A SURGE PROTECTOR** (not supplied with this adjustable bed).

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Warning – Danger of explosion if battery is incorrectly replaced. Replace only with the 6LR61 9V batteries.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)

WARRANTY WARNING

This bed is specifically designed to require no maintenance by you, the user. Any opening or tampering with the motors or hand controls will void the warranty. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Only those authorized may conduct repairs or part replacement on your adjustable bed.

IN-HOME USE ONLY

This adjustable bed is designed exclusively for in-home use.

HOSPITAL/COMMERCIAL DISCLAIMER

This base is NOT designed for commercial or hospital use and is NOT designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or use near explosive gases.

PRODUCT RATINGS

Lift Motor Restrictions: The lift motor in this bed is NOT designed to operate continuously for more than one (1) minute over a nine (9) minute time period, or approximately 12% duty cycle. To ensure reliable functionality and full life of this product, do not attempt to exceed these limits. **NOTE:** Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

WEIGHT RESTRICTIONS

The recommended weight limits on our adjustable beds are: Queen: 650 lb Full/XL: 500 lb Twin/XL: 400 lb (800 lb if using two twin XLs as a King) 1/pc King: 800 lbs

The structure of the bed will support the recommended weight when distributed evenly across the bed. The head section is not designed to individually support or lift this amount of weight. For optimal performance and integrity of structure, enter and exit **ONLY** when head section is flat. **NOTE:** Exceeding the recommended weight restrictions could damage your adjustable bed and void your warranty.

SMALL CHILDREN AND PETS WARNING

Immediately dispose of all packing materials as they can pose a smothering risk to small children and pets. Injury could occur also if children or pets are permitted to play on or under the bed. Do not allow children to operate this bed without adult supervision.

LUBRICATION AND CLEANING

This product is designed to be maintenance free. The lift motors are permanently lubricated and sealed—no additional lubrication is required. Do not apply lubricant to lift motor lead screws or any nylon nuts or the base may inadvertently creep downward from the elevated position.

LIFT WARNING

DO NOT SIT ON THE HEAD SECTION WHILE IN THE RAISED POSITION, OR DURING LIFT OR LOWERING CYCLES.

LOCATION ENVIRONMENT

The level of sound experienced during operation is directly related to the location environment. For example, when a base is located on a hardwood floor, a tone will be audible. To minimize this resonance, place a piece of carpet under each leg of the base. It is possible to experience vibration or noise from the headboard brackets, headboards or foot boards if mounting bolts are not firmly tightened.

MOVING AFTER INSTALLATION

Do not place adjustable bed base vertically on its head, foot sections or sides. This may cause injury to persons or damage to base.

WARNINGS

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off accessories.
- Close supervision is necessary when this base is used by, or near children, invalids, disabled persons, or pets.
- Use this base only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this base if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped in water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, remove plug from outlet.
- **DO NOT USE NEAR PEOPLE USING OR WEARING MEDICAL DEVICES. FOR HOUSEHOLD/RESIDENTIAL USE ONLY.**



PREMIUM HYBRID PLATFORM BASE | PBHDLX50

QUICK START GUIDE




INCLUDED


A




B

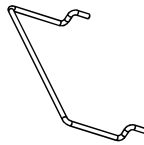

C

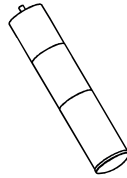



D

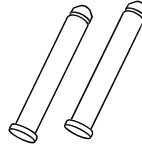

E




WARNING
DO NOT TILT or LEAN
base on legs when turning
base over

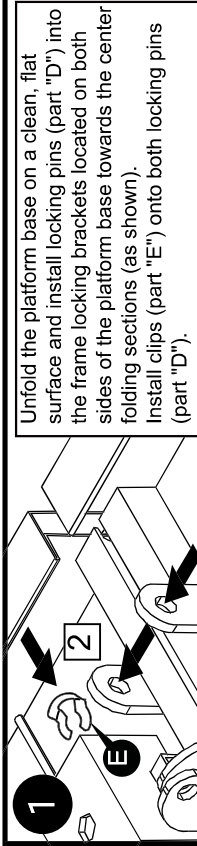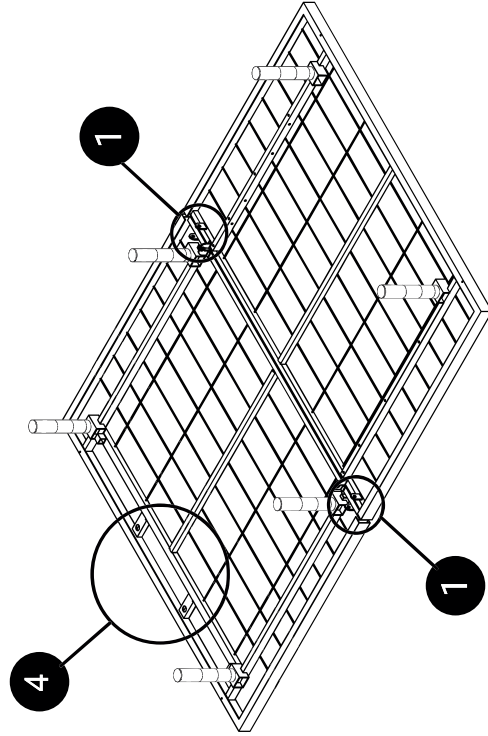

Unfold the platform base on a clean, flat surface and install locking pins (part "D") into the frame locking brackets located on both sides of the platform base towards the center folding sections (as shown).
Install clips (part "E") onto both locking pins (part "D").


2

Install (6) legs (part "C") into the threaded leg holes found at each corner and middle section of the platform base. Tighten each section securely by hand to ensure stability. Remove sections from leg to adjust to desired height.

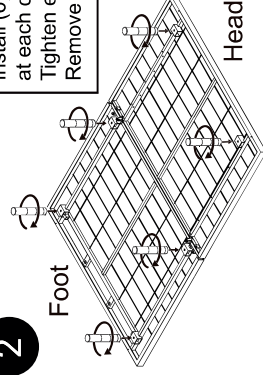


3

Using (2) people, flip the base over so it is resting on all (6) legs and is level on the floor.
*Do not tip base over on the legs, this can result in damage to the legs, frame or floor.

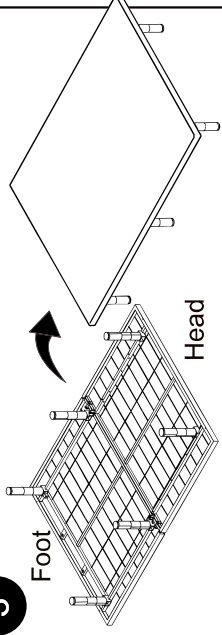

4

Install the mattress retainer bar (Part "B") into the retainer bar grommets located at the foot section of the base (as shown).

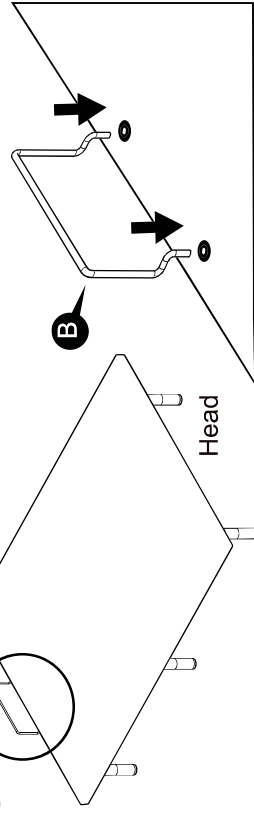

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com



PREMIUM HYBRID PLATFORM BASE | PBHDLX50

QUICK START GUIDE

SAFETY INFORMATION

ATTENTION!

IMPORTANT SAFETY INSTRUCTIONS: SAVE THIS MANUAL! PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. PROPER OPERATION OF YOUR ADJUSTABLE BED IS NECESSARY TO ENSURE THE LONG LIFE AND DURABILITY YOU EXPECT FROM A HIGH QUALITY PRODUCT. THE MANUFACTURER HAS TESTED AND INSPECTED THIS PRODUCT PRIOR TO SHIPMENT.

WARRANTY WARNING

This bed is specifically designed to require no maintenance by you, the user. Any opening or tampering with the motors or hand controls will void the warranty. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Only those authorized may conduct repairs or part replacement on your adjustable bed.

IN-HOME USE ONLY

This adjustable bed is designed exclusively for in-home use.

HOSPITAL/COMMERCIAL DISCLAIMER

This base is NOT designed for commercial or hospital use and is NOT designed to meet hospital standards. Do not use this base with TENT TYPE oxygen therapy equipment or use near explosive gases.

WEIGHT RESTRICTIONS

The recommended weight limits on our adjustable beds are: Queen: 650 lb Full/XL: 500 lb Twin/XL: 400 lb (800 lb if using two twin XLs as a King) 1/pc King: 800 lbs

The structure of the bed will support the recommended weight when distributed evenly across the bed. Exceeding the recommended weight restrictions could damage your bed and void your warranty.

SMALL CHILDREN AND PETS WARNING

Immediately dispose of all packing materials as they can pose a smothering risk to small children and pets. Injury could occur also if children or pets are permitted to play on or under the bed. Do not allow children to operate this bed without adult supervision.

MOVING AFTER INSTALLATION

Do not place bed base vertically on its head, foot sections or sides. This may cause injury to persons or damage to base.

WARNINGS

- Unplug from outlet before putting on or taking off accessories.
- Use this base only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this base if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or dropped in water.
- Never drop or insert any object into any opening.
- Do not use outdoors.

Warranty Service
888-821-1555

Customer Service
314-499-8869

QSG and Warranty information are
available at symphonysleep.com